



SHENZHEN FENDA TECHNOLOGY CO.,LTD,GUANGDONG,PRC
ADD: Fenda Hi-Tech Park, Zhoushi Road, Shiyan, Baoan, Shenzhen, Guangdong, PRC
Tel: +86-755-27486668 (800 line) Fax: +86-755-27486663 P.C.: 518108

F&D
www.fenda.com



A111 User Manual

Multimedia speaker

Warnings:

Do not place the system in the high-temp and humidity environment,prevent it from raining or rough handling and strong shock.

In order to avoid electric shock and other accidents,do not open the right side panel cover for repair without any professional guidance.

In case fragmaents or other liquids is accidentally sprinkled inside the abinet,pls. Swith off the power immediately.In case of repair pls. Come to the professional maintenance for help.

Switch off the power and take off the plug from the power jack when the system is not on work.

Keep it safe from water drops or splashing water,and no liquid container allowed to be put on its top side.

Keep the cabinet vent far from the wall by 20 mm at least and the air vent should not be blocked.


Do not keep it close to the fire.

Package contents

- | | |
|--|------|
| 1. Wooden cabinet for sub-woofer | 1pc |
| 2. Satellite speakers (with RCA cable) | 2pcs |
| 3. Signal input cable | |
| a) 3.5 mm to RCA stereo cable | 1pc |
| b) RCA to RCA stereo cable (optional) | 1pc |
| 4. Operation manual | 1pc |

Right side panel diagram


1. Volumne knob
2. Bass knob
3. Audio input socket
4. Audio output socket
5. Power switch
6. Power cable

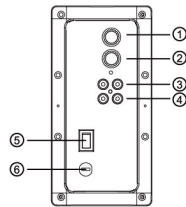

Specification

Output power:
Satellites: 11 Wx2(THD+N=10%,1KHz)
Subwoofer: 13 W(THD+N=10%,80Hz)
Speaker unit:
Subwoofer: 4 " 4Ω
Satellites: 4 " 4Ω
Power: 220-240V~50/60Hz
Frequency Response:
Subwoofer: 65Hz-120Hz
Satellites: 120Hz- 20KHz
Separation: ≥35dB
S/N Ratio: ≥65dB

Installation guide

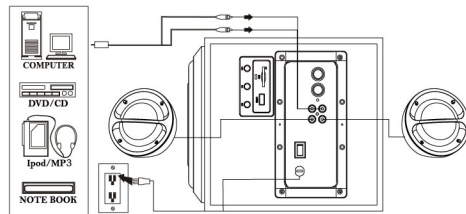

- 1.Connect the satellite speaker cable to the output port of subwoofer in respective colour port
- 2.Insert Input signal cable(RCA Socket) into sufwoofer input port and the other end with output port of your Audio/Video system in respective colour port.
- 3.Then plug in Power cable
- 4.Rotate all function knobs to minimum and then press power button ON.
- 5.Adjust all knobs(Volume,Bass) to your satisfaction level and enjoy.
- 6.Rotate all knobs at its minimum levels before putting the Power OFF
- 7.Gentle reminder: please do not turn volumne knob to its maximum so as to prevent hearing loss,for this speaker system is of big power output.

MULTIMEDIA (USB/SD) PLAYBACK FUNCTION

1. Previous button: short press this button, switch to previous song. Press and hold this button for 2 seconds then release, it will find previous song folder in USB or SD card and play automatically.
2. Play/Pause: When USB or SD card inserted, the speaker will play it automatically. During USB or SD card playing, Blue LED flashes fast. Press this button will switch between "play" and "pause". During "pause", blue LED flashes slowly.
3. Next button: short press this button, switch to next song. Press and hold this button for 2 seconds then release, it will find next song folder in USB or SD card and play automatically

Notice:

1. If no USB or SD card inserted, blue LED will be bright.
2. The system detects and plays last inserted Multimedia card.
3. When in playback through multimedia, the system will select first folder and start playing first song. It will play all songs of first folder and after completion, it will jump to second folder automatically.

